
## **Transitions & Collars**

Fire Damper Models: MD19, 15MD, 17MD, MD17, MD39, 30MD, 38MD, 37MD, MA19, 15MA, 17MA, MD17, MA39, 30MA, 38MA, 37MA Combination Fire/Smoke Damper Models: FR, CR, MR, AR, FS, CG, MS, AS, FT, CH, MT, AT, FA, CA, MA, UA, TA, CT, LA Smoke Damper Models: SR, SR, KR, UR, S, SG, KH, A, SA, GA, KA, AA

## <u>Notes</u>

- 1. A factory provided sleeve is required for the damper to utilize transitions.
- 2. Transitions can be provided for vertical or horizontal orientations.
- 3. Transitions can be provided for one or both ends of the damper (one end only for Front Access and Corridor Dampers).
- 4. The collar size will be approximately 0.25" smaller than the nominal duct size.

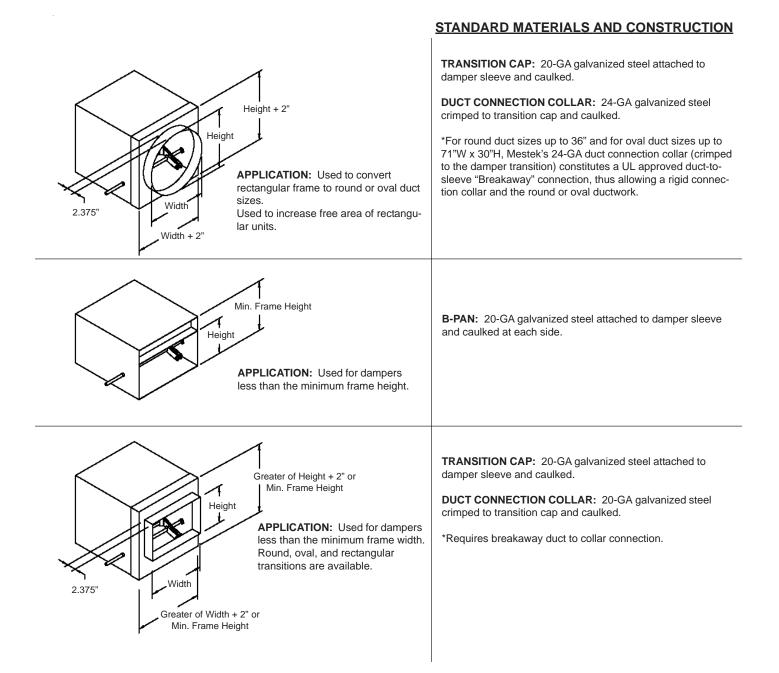



## **Transitions & Collars**

Fire Damper Models: MD19, 15MD, 17MD, MD17, MD39, 30MD, 38MD, 37MD, MA19, 15MA, 17MA, MD17, MA39, 30MA, 38MA, 37MA
Combination Fire/Smoke Damper Models: FR, CR, MR, AR, FS, CG, MS, AS, FT, CH, MT, AT, FA, CA, MA, UA, TA, CT, LA
Smoke Damper Models: SR, SR, KR, UR, S, SG, KH, A, SA, GA, KA, AA

This page intentionally left blank.

